Ground Continuity Tester



FEATURES

- * AC 32 Amperes High Test Current
- * Measuring Resistance From 0 ~ 0.6Ω
- * Continue & Normal Test Mode
- * Four Wire Measurement
- * GO-NOGO Function
- * Test and Result Output Signal

GCT-630

SPECIFICATIONS

TEST CURRENT

AC 3A ~ 32A

TEST VOLTAGE

MAX 8V AC Typically

MEASURING RESISTANCE RANGE

0 to 0.12Ω , $0 \sim 0.6\Omega$ 2 ranges

MEASURING ACCURACY

 $3A \sim 5A \pm 10\%$ of full scale $5A \sim 32A \pm 5\%$ of full scale

CURRENT METER

Indicate the testing Current and Setting value of Warning

RESISTANCE METER

Indicate the testing Resistance and Setting value of Fail and Subtraction

SWITCHING

Zero-start operating switch

TIMER

1S, 10S, 1MIN, 10MIN, 4 ranges

WARNING

Monitor the variation test current, When the test current is beyond $^\pm$ 10% of the setting value, the warning operation will proceed The setting value from 3A $\,\sim$ 32A

SUBTRACTION

The resistance of testing line can be subtracted from the test value The subtraction range from 0 ~ 0.1 Ω Accuracy is $\pm 5\%$

GO-NOGO SET

If the test reading value is beyond the setting value, the fail will be acting, otherwise the pass will proceed The setting value from 5% \sim 100% of the test range Accuracy is \pm 15% of full scale (3A \sim 5A) \pm 10% of full scale (5A \sim 32A)

REMOTE CONTROL

Input high voltage range from 11V \sim 15V, Low voltage range from 0 \sim 4V and input Low current range below 20mA

TEST MODE

Normal: if the warning acted then the test will stop Continue: if the warning acted then the test will be continuously

BUZZER

A Buzzer is sounded when the test fail acted

TEST FREQUENCY

50Hz or 60Hz independent by Line Voltage

OUTPUT SIGNAL

TEST, GO, NG, WARNING, READY, MONITOR

POWER SOURCE

AC 100V/120V/ 220V/ $240V \pm 10\%$, 50/60Hz

ACCESSORIES

Instruction manual x 1 , Power cord x 1 , Test Lead GTL-115 x 1

DIMENSIONS & WEIGHT

430(W) x 178(H) x 510(D) mm, Approx. 21 kg

ORDERING INFORMATION

GCT-630 AC32A Ground Continuity Tester